


genexis 



XG6846B

XG-Series
Installation Guide



Button overview

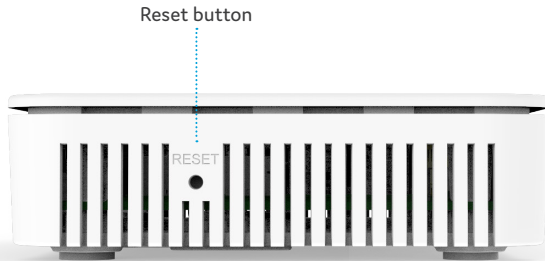

Reset button (recessed)

Reset – press 5 seconds and release


Port overview

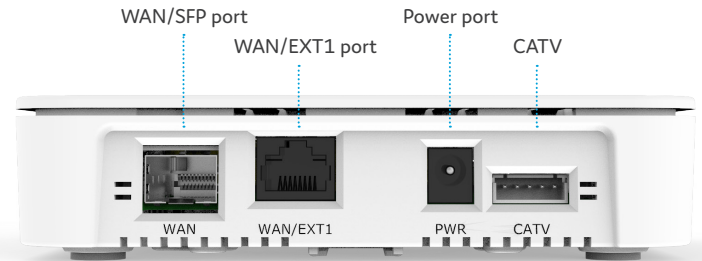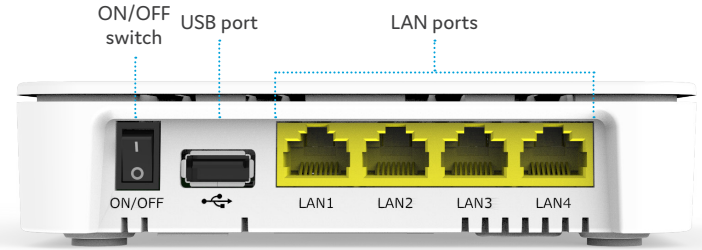

ON/OFF switch

Power ON or OFF – switch device ON or OFF

LED overview

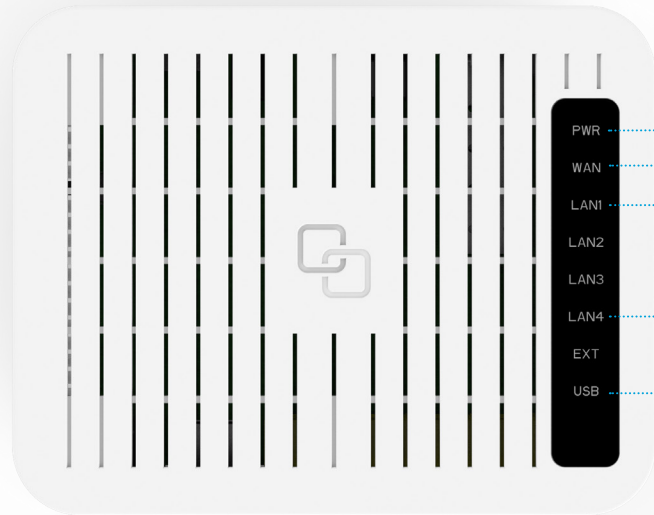

Power/System

Green – system ok
Green (blinking) – booting in progress
Red – boot failed
Off – power off

WAN/EXT

Green – 1Gb link established
Green (blinking) – link ok, no remote management
Yellow – 100Mb link established
Off – no WAN connected

LAN

Green – 1Gb link established
Green (blinking) – indicate traffic
Yellow – 100Mb link established
Yellow (blinking) – indicate traffic
Off – no LAN connected

USB (optional)

Green – USB device detected
Green (blinking) – alarm indicated by LED controller
Off – no USB connected or detected

Installation guide

Different language versions of this document and additional product information are available on <https://genexis.eu/product/xg-series/downloads>

Box contents

- XG6846B (active device)
- Power adapter
- RJ45 Network cable (2x)
- Label (self-adhesive)
- Plugs & screws (4X)
- Installation Guide (this document)

Label position

The product label is positioned on the back of the active device.

Preparation

Ensure there is a power socket within reach of where the device is being installed and that the product is close to your broadband outlet, alternatively, at your computer.

Setting up the XG

1. Connect the RJ45 network cable to the internet LAN port.
2. Ensure that your device is powered by the power adapter and plugged in an electrical socket.
3. Switch the ON/OFF switch.
4. The colored LED of the power/status will start blinking. Please wait for 2 minutes for the this process to complete.
5. Depending on the operator the device may need to update your user profile. This might take 10 minutes. Do not turn of the power meanwhile.
6. If your personal device is connected properly with the LAN port, the power LED, WAN and LAN LEDs will have a fixed green color. In some cases 100Mb might be the correct speed.

Your XG6846B is now installed!

Troubleshooting

Is the Power (PWR) indicator LED off?

- Check if the device is properly connected to the power adapter.
- Check if the power adapter is connected to an electrical outlet.
- Check if the device is turned on - the ON/OFF switch should be in 'ON' state.
- If the device is properly connected and turned on, the Status indicator LED should turn green after a while.

Is the Power (PWR) indicator LED red?

Contact your service provider.

Is the WAN indicator LED off?

- Check the connection of the RJ45 cable to the WAN port (depending on the WAN interface you are using).
- If the WAN indicator LED is off, please contact your service provider.

Reset the device

The reset button resets the device to factory settings. You can press this button with a small pin or paperclip. See chapter 'Button overview' to locate the pinhole. Press and release the button for more than 5 seconds.

EU Declaration of Conformity

Hereby, Genexis B.V. declares that the product XG6846B is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, Delegated Directive 2015/863 and Ecodesign Directive 2009/125/EC.

The full text of the EU declaration of conformity is available at the following internet address: <https://genexis.eu/red/XG6846B>

Company Name

Genexis B.V.

Signature of authorized person

Company Address

Lodewijkstraat 1a
5652 AC Eindhoven
The Netherlands



Name and title of authorized person

Maarten Egmond, CTO

Place of issue

Eindhoven
The Netherlands

Date of issue

2020-08-11

Revision 1.3 - February 2024 - Copyright © 2024 Genexis Netherlands B.V. All rights reserved.

Genexis assumes no responsibility for any inaccuracies in this document. Genexis reserves the right to change, modify, transfer, or otherwise revise this publication without notice.